

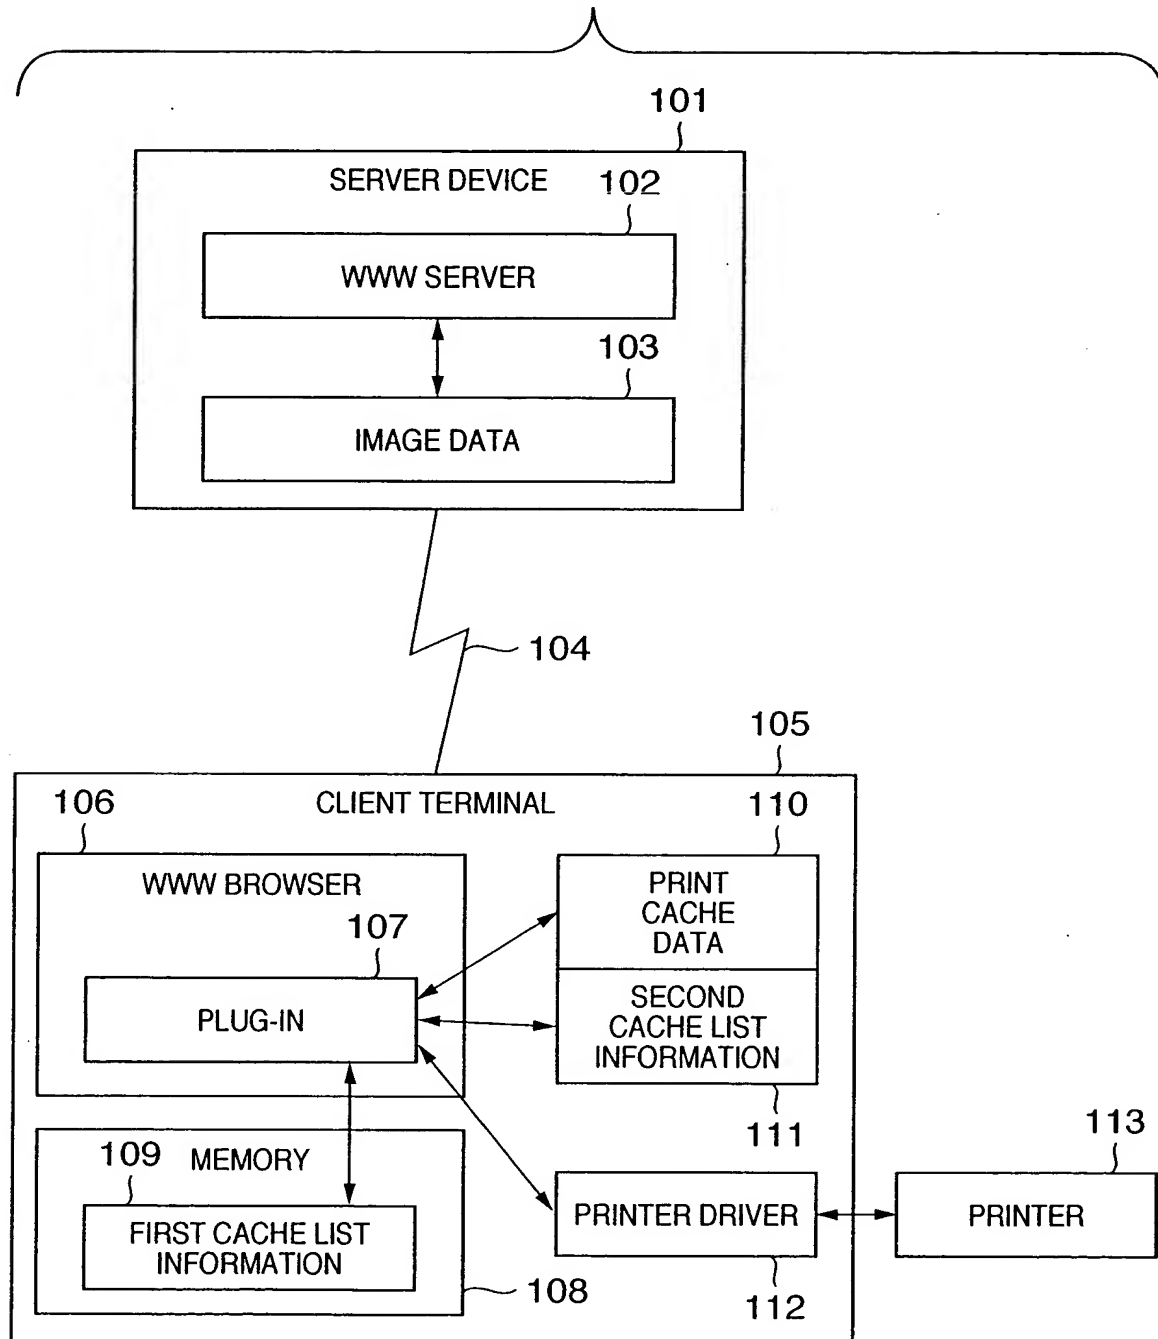 
FIG. 1

FIG. 2

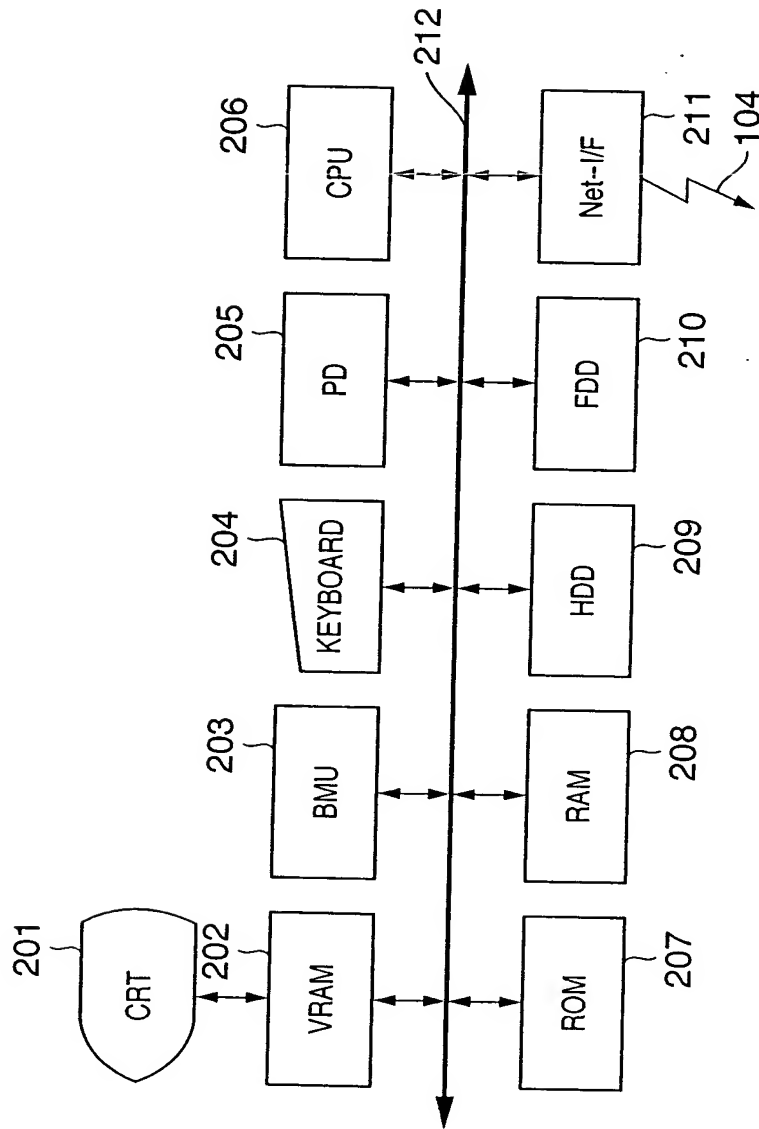 
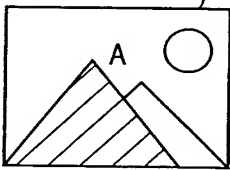 
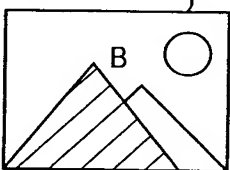 
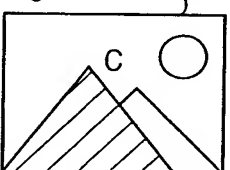 
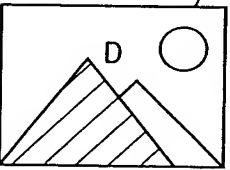 
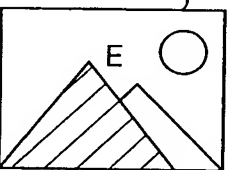 



FIG. 3

301

PRINTER	PRINTER 1	▼	302
PAPER SIZE	L SIZE	▼	303
PAPER TYPE	GLOSSY PAPER	▼	304
LAYOUT	FRAMELESS	▼	305

A	B	C
		
1 SHEET	3 SHEETS	2 SHEETS
D	E	F
		
2 SHEETS	1 SHEET	2 SHEETS

308 PRINT

FIG. 4A

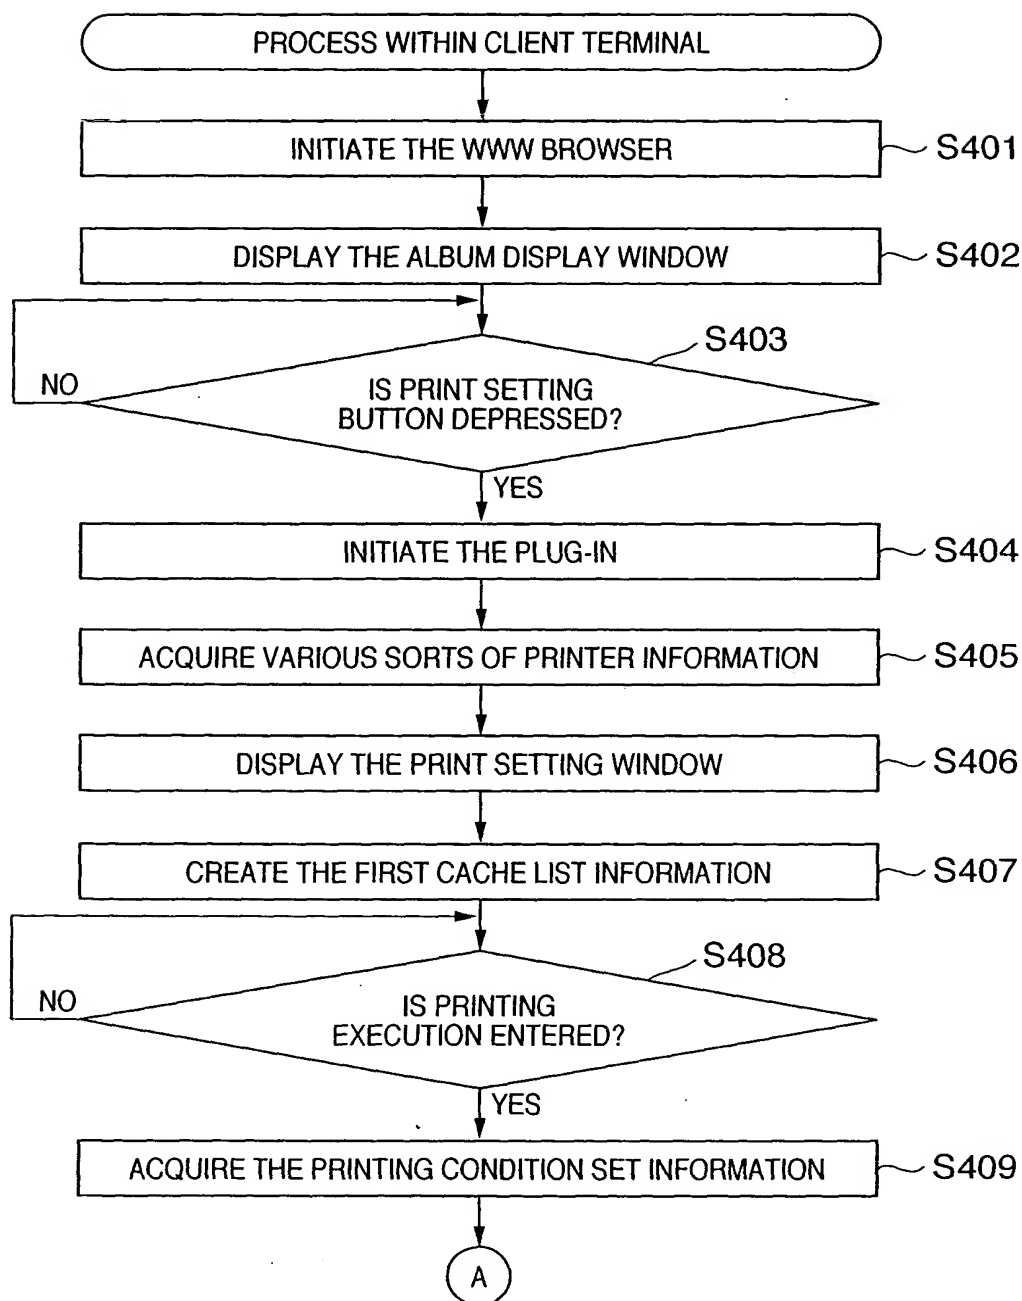 


FIG. 4B

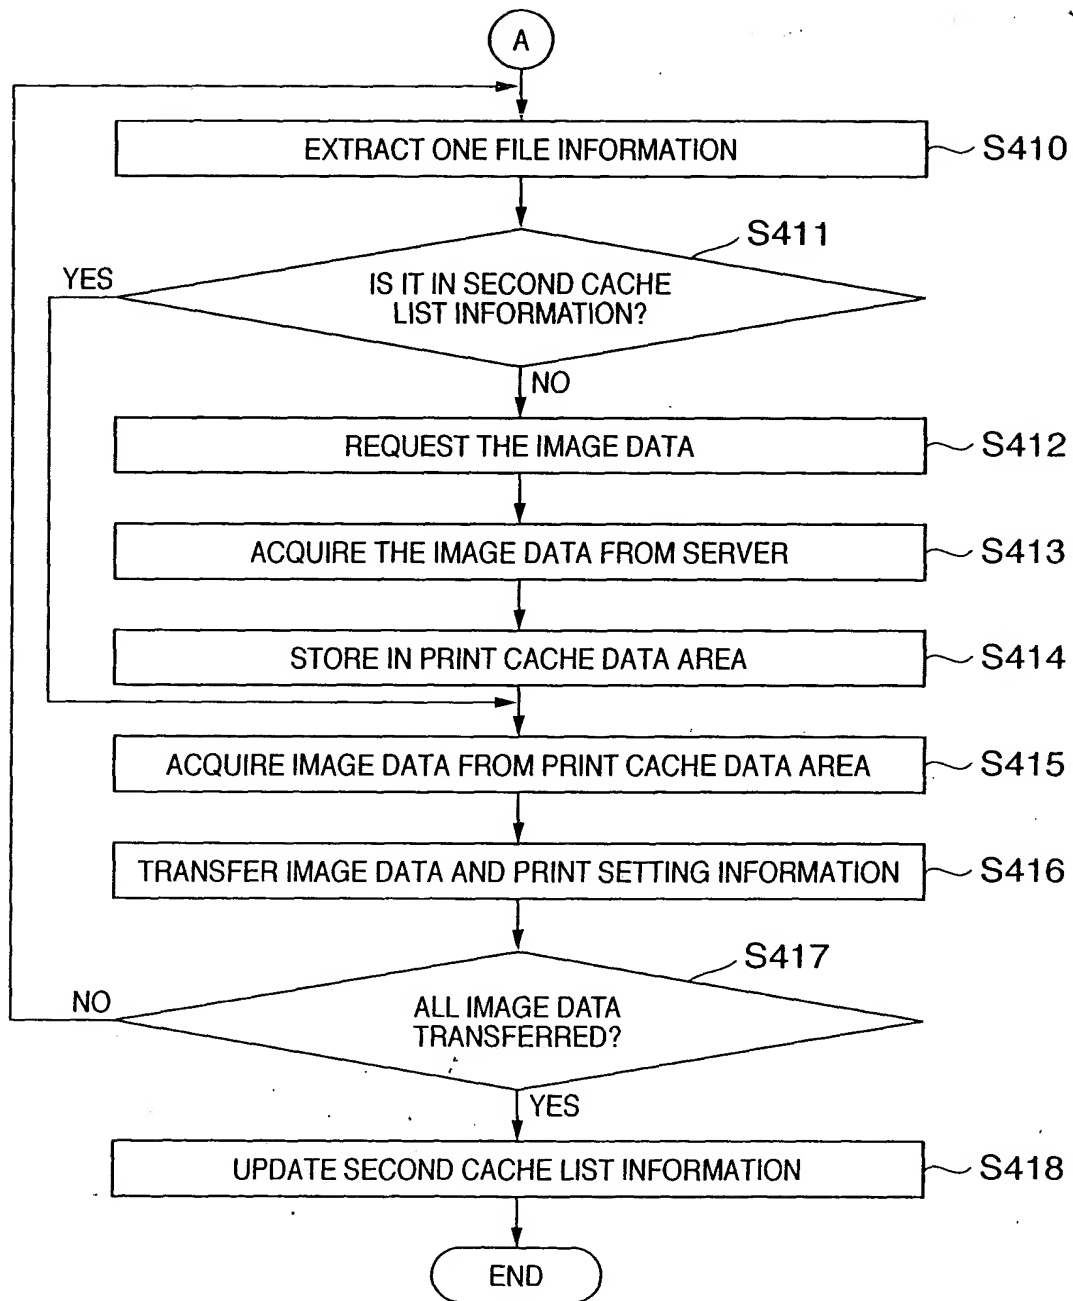 


FIG. 5

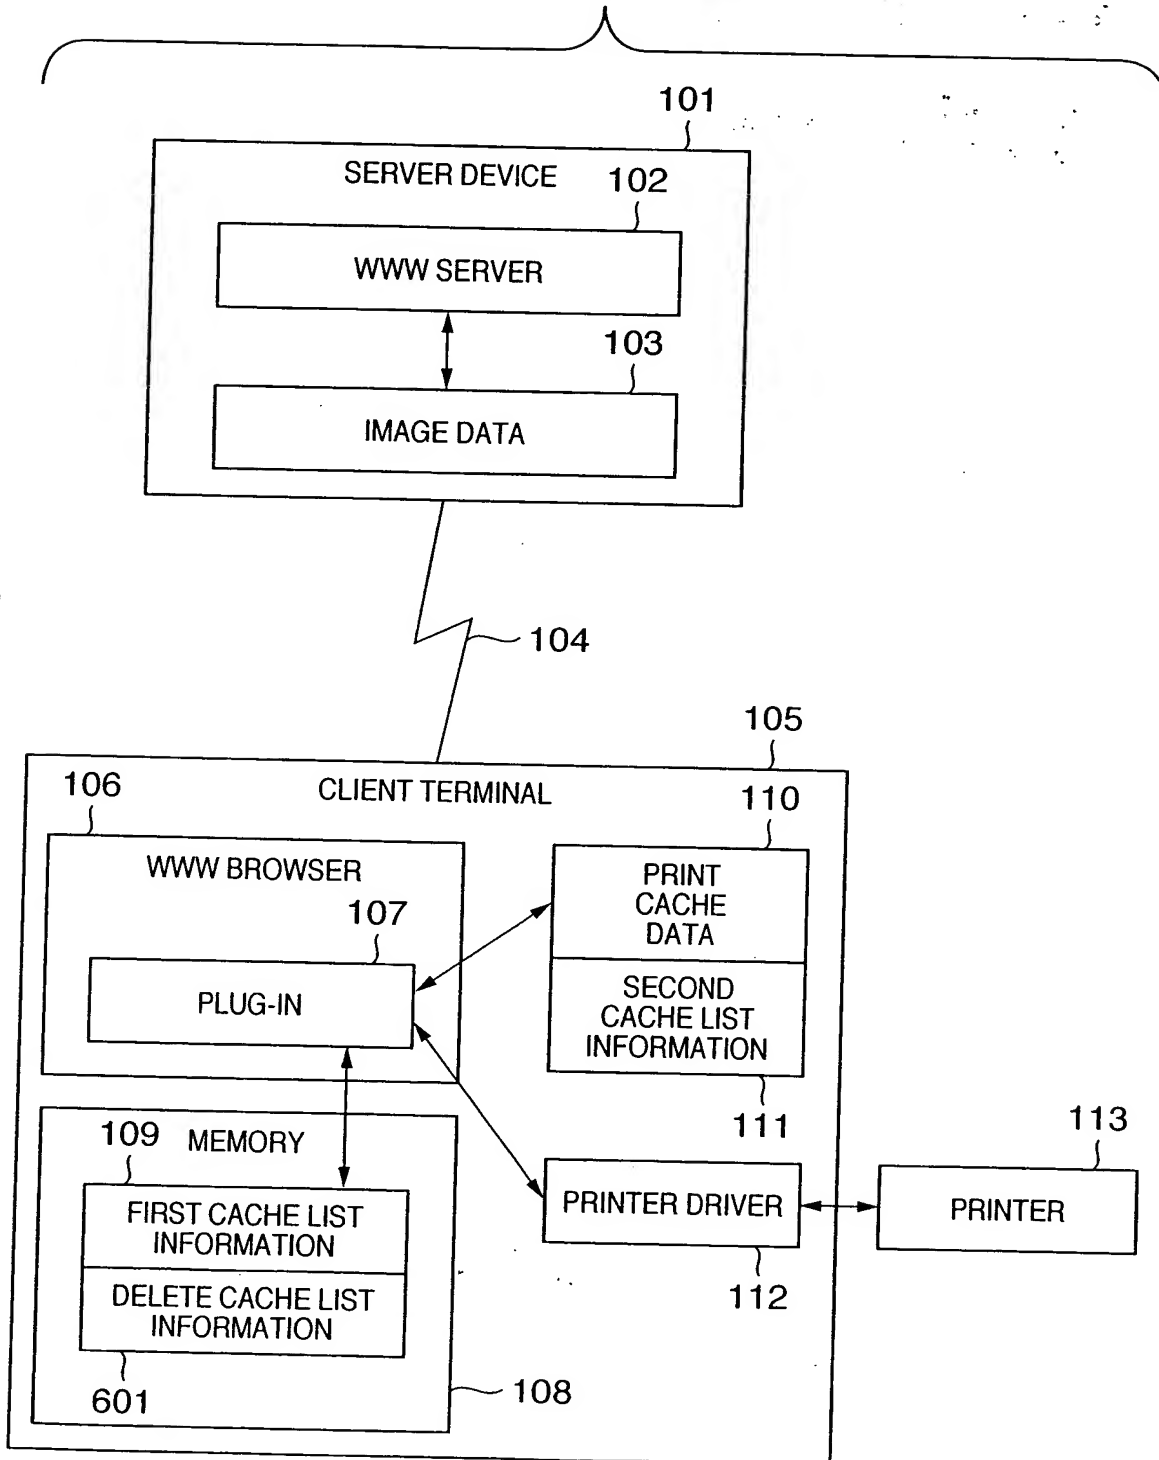 


FIG. 6

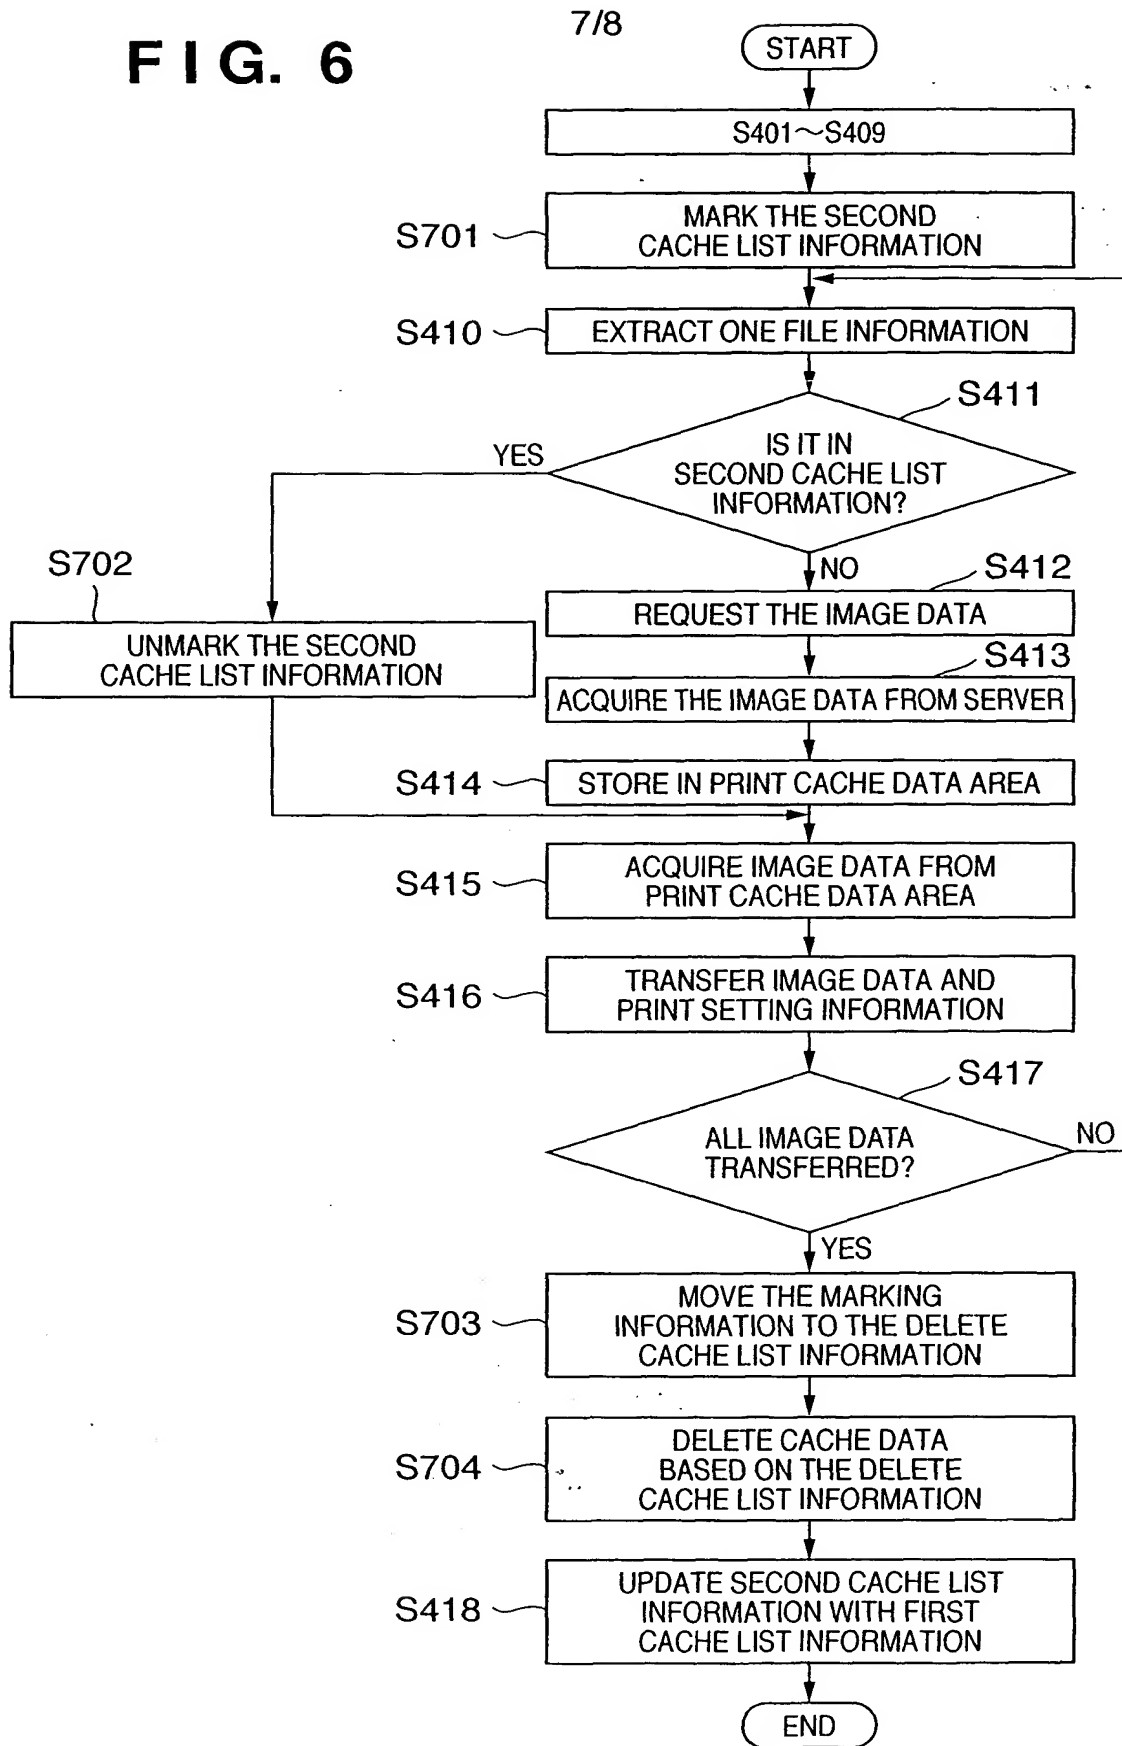 
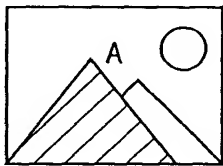 
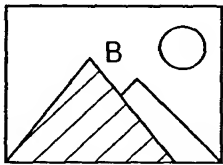 


 
FIG. 7

900

PLEASE CHECK A CHECK BOX OF AN IMAGE TO BE PRINTED AND PUSH THE PRINT SETTING BUTTON.

☐ 901  < CAPTION ON IMAGE **A** >

☐  < CAPTION ON IMAGE **B** >

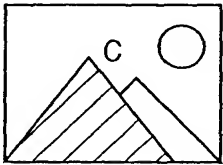☐  < CAPTION ON IMAGE **C** >

902

903